

**Instructions for the Nintendo 64**

# Memory Card (P-302)

The Memory Card plugs directly into the slot located on the underside of the Nintendo 64 controller. To use the Memory Card, slide the unit into the slot until it clicks into position. The Memory Card will work with any game that supports the "save to the Controller Pak" option.

NOTE: Removing the Memory Card while saving may cause data loss or corruption.

## Troubleshooting

1. You can view the files saved in the Memory Card in Nintendo 64's Memory Manager. First, turn the system OFF. Next, insert the game you wish to play into the Nintendo 64 video game system. Turn the Nintendo 64 system ON while pressing and holding the start button.
3. DO NOT remove the Memory Card while recording information.
1. DO NOT insert the Memory Card into the Memory Expansion port of the Nintendo 64 video game system (insert the Memory Card into the Nintendo 64 controller).

## Maintenance

1. Do not touch the front connectors of the Memory Card directly. Keep the front connectors clean and dry.
2. Do not leave the Memory Card in humid areas or expose to high temperatures.



### Important notes

1. The actual loading and saving of a game is dictated by the software. Please refer to the game manual for the proper loading and saving instructions.
2. The Memory Card will not save the whole game but will save positions and points earned.

If you need further assistance, please direct all inquiries or requests to:

E-mail: [support@gameshark.com](mailto:support@gameshark.com)

World Wide Web: <http://www.interact-acc.com>

Mailing address: InterAct Accessories

Attn: Consumer Services

9611 Pulaski Park Drive, Suite 309

Baltimore MD 21220.

Phone Number: 410-238-1426, weekdays 10:00 a.m. - 8:00 p.m. EST

