



madcatz.com

<http://www.emulation64.fr>

ADVANCED CONTROL PAD FOR NINTENDO® 64

Action and Shoulder Buttons, Trigger These buttons are just like the buttons on your original controller. Follow your software manual for specific moves.

View or "C" Group Buttons These 4 buttons are generally used to change the view perspective in your game. In addition, many games use them as auxiliary Action Buttons.

Slow Motion Button One touch of the Slow Motion Button will slow down the action to master those difficult moves. Press the Slow Motion Button again, and you're back at normal speed. When you are in SLOW MOTION, the SLOW LED light will flash.

NOTE: Some software is not designed for slow motion.


Turbo Set Button TURBO mode will provide rapid fire shots and movements for the corresponding Action Buttons. Any Action Button can be set to TURBO mode. Follow the easy steps below in SETTING THE TURBO FUNCTION to set as many Action or Shoulder Action Buttons to TURBO mode as you like.

Reset Button This button is used to RESET the Action Buttons you have programmed to TURBO mode, so that they return to NORMAL mode.

Directional Pad and Start Button Use these buttons like you would on your original control pad.

Analog Thumbstick Maneuver the thumbstick to control your game character or vehicle with True Analog precision.

NOTE: Power to your Nintendo64 game console should be OFF when connecting or disconnecting your Advanced Controller.

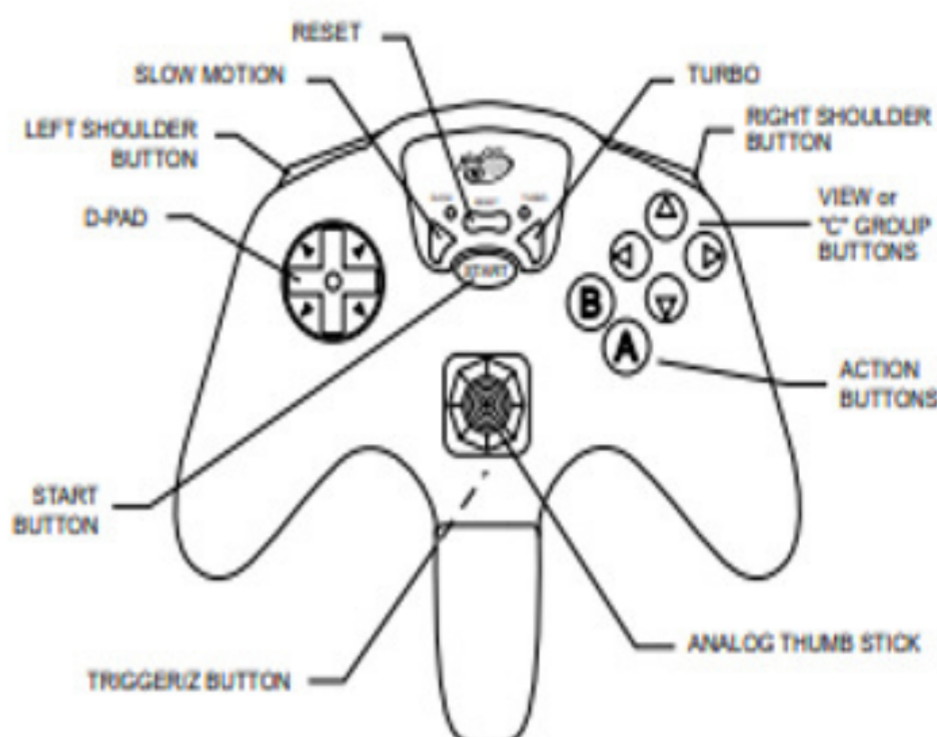


SETTING THE TURBO FUNCTION


- 1) Press and hold the TURBO Button.
- 2) Press as many of the controller buttons (one at a time) as you would like in TURBO mode.
- 3) When you have completed your selections, release the TURBO Button. The LED indicator light will flash when you press the Action Button you have programmed. See the TURBO Programming Example below.

TURBO PROGRAMMING EXAMPLE

To program the the A and Z Action Buttons and the Right Shoulder Button for TURBO mode, follow the steps below:

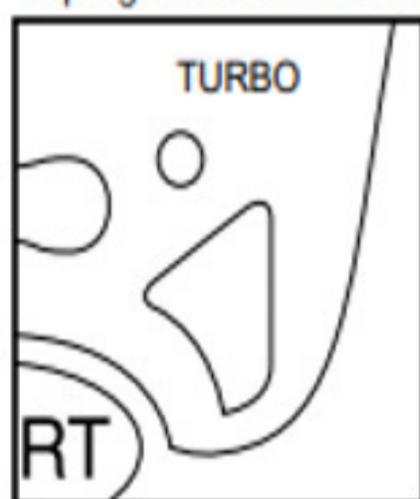


1. Press and hold down the Turbo Button (the LED will be off).

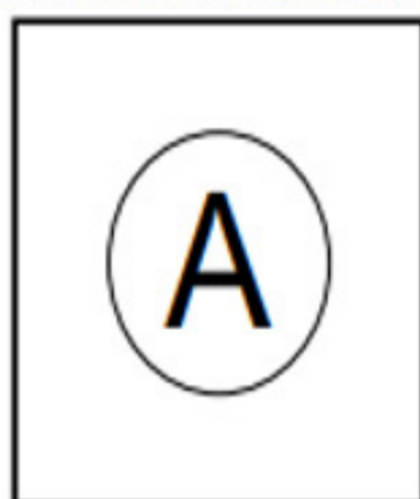


2. While holding down the Turbo Button, press the "A" Action Button.



3. While holding down the Turbo Button, squeeze the Trigger.

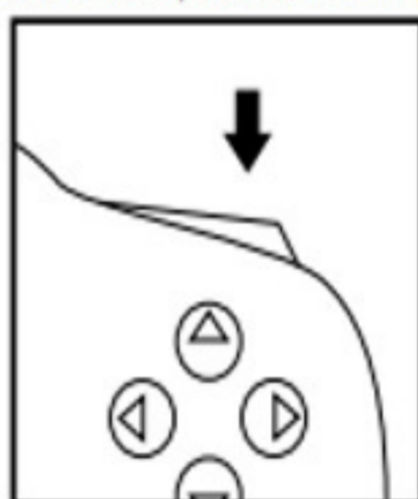

4. While holding down the Turbo Button, press the Right Shoulder Button.

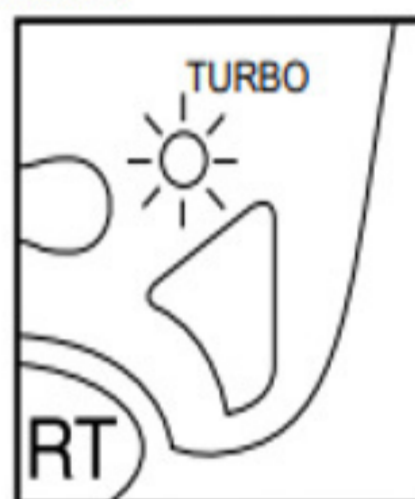

5. Release the Turbo button. The Turbo LED light will flash when the programmed buttons are pressed.

RESETTING YOUR ADVANCED CONTROLLER

- 1) Press and hold down the Reset Button.
- 2) While holding down the Reset Button, press one at a time, any of the Action Buttons you have programmed for TURBO mode that you want to change back to NORMAL mode.
- 3) When you have RESET the Action Buttons back to NORMAL mode, release the Reset Button. The Action Buttons that you have not RESET will remain in TURBO mode.

NOTE: The LED light will no longer flash when you press the corresponding Action Button that was previously programmed.

TROUBLESHOOTING

Problem: Action figures don't fire or move when the buttons are pressed.

Solution: Check to make sure the cable is properly connected to the console.

Problem: Game play is erratic or pauses repeatedly.

Solution: The game you're playing may not be compatible with the advanced slow motion feature of the control pad. Play this game in NORMAL mode only.

Problem: Action figures repeatedly fire or move.

Solution: You may have some of the Action Buttons set in TURBO mode. Reset the Action Buttons you do not want in TURBO mode.

Problem: The software is PAUSED after turning off SLOW MOTION mode.

Solution: Simply press the Start Button to resume game play.

Problem: The controller isn't functioning at all.

Solution: Turn power off, disconnect controller, reconnect controller and turn power on.



CAUTION

- Stop using this unit immediately if you begin to feel tired or if you experience discomfort or pain in your hands and/or arms while operating the unit. If the condition persists, consult a doctor.
- Do not attempt to operate the unit in any way except with your hands. Do not bring the unit in contact with your head, face, or near the bones of any other part of your body.
- The vibration function of this unit can aggravate injuries. Switch off or do not use the vibration function of the unit if you have any ailment of the bones or joints of your hands or arms.
- Avoid prolonged use of this unit. Take breaks every 30 minutes.
- To prevent fire or shock hazard, do not expose this unit to rain or moisture. Do not use within 30' of any water such as swimming pools, bathtubs, or sinks.
- To avoid electrical shock, do not disassemble. Refer servicing to qualified personnel only.
- This unit should be operated only from the power source indicated on the unit. If you are not sure of the type of electrical power supplied to your home, contact your local power company.
- Do not overload wall outlets or extension cords beyond their capacity, since doing so can cause fire or electric shock.
- This product contains small parts that may cause choking if swallowed. Not intended for children under 3 years of age.
- Never push objects of any kind, other than authorized items, into the product as they may touch dangerous voltage points or short out parts that could result in fire or electrical shock.
- Use this unit only as intended.

WARRANTY

When you purchase from Mad Catz, you purchase quality. We put our products through comprehensive tests to ensure the highest reliability and compatibility. You will probably never encounter a problem with our products, but if you should experience any difficulties, Mad Catz offers a five (5) year replacement warranty on this product. Mad Catz warrants to the original consumer purchaser that this product is free from defects in either material or workmanship. If a defect covered by this warranty occurs, Mad Catz, at its option, will repair or replace the product at no charge. Mad Catz' products are tested to withstand normal wear and tear, but are not indestructible and can be damaged if misused. The Mad Catz warranty does not cover normal wear and tear or abusive use. This warranty does not apply to products used for any industrial, professional or commercial purpose. This warranty does not apply to products that have been damaged by abuse, misuse, modification or tampering or by any other cause not relating to either materials or workmanship. If a replacement is necessary and your product is no longer available, a comparable product may be substituted at Mad Catz' sole discretion. The Mad Catz limited lifetime warranty is available to North American customers only, including Canada, Mexico and the United States

To activate your five (5) year warranty, you must:

- Register your Mad Catz product on the web at www.madcatz.com

To obtain warranty service, you must:

- Call Mad Catz Technical Support at 1.800.659.2287 (USA only) or 1.619.683.9830 (outside USA)
- Obtain a Return Authorization Number from Mad Catz Technical Support
- Return the product to Mad Catz with the postage prepaid and insured. Mad Catz will not be responsible for any loss or damage during shipment. Mad Catz will pay the full return shipping (see return address below)
- Enclose a copy of the original sales receipt showing a purchase date
- Enclose a full return address along with daytime and evening phone numbers

Be sure to package the product so that it will not become damaged in shipping. We recommend placing the original box inside another box packed with packaging material. Mad Catz, Inc. will not be responsible for any damage or loss to the product in shipment

All returns should be addressed to:

Mad Catz, Inc.
ATTN: WARRANTY
7480 Mission Valley Rd
Suite 101
San Diego, CA 92108-4406

Please allow for 4 to 6 weeks for processing. In the event of a problem, we will contact you at one of the phone numbers provided.

©2002 Mad Catz, Inc. 7480 Mission Valley Road, Suite 101, San Diego, CA 92108 USA. Mad Catz, the Mad Catz logo are trademarks or registered trademarks of Mad Catz, Inc., its subsidiaries and affiliates. Nintendo64 is a registered trademark of Nintendo of America, Inc. (NAI). This product is not sponsored, endorsed or approved by NAI. International and domestic patents pending. Made in China. Printed in Hong Kong. All rights reserved. Features, appearance and specifications may be subject to change without notice. Mad Catz stands behind its products 100%.

Questions? Visit our website at www.madcatz.com or call 1-800-659-2287 (USA only) or 1-619-683-9830.

Product No. 5326 10/02

